



Starting & Stopping the Engine

Always follow the proper starting procedure described below.

Preparation

Before starting, insert the key and turn the ignition switch ON.
Make sure that the transmission is in neutral and the engine stop switch is at RUN (\odot).
Turn the fuel valve ON.




Starting Procedure

To restart a warm engine, follow the procedure for *High Air Temperature*.

Normal Air Temperature
10° – 35°C (50° – 95°F)

LEFT SIDE

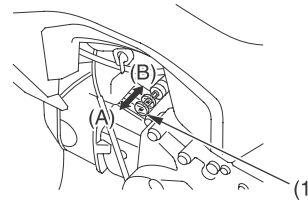

(1) choke knob

(A) fully ON
(B) fully OFF

1. Pull the choke knob (1) out all the way to fully ON (A).

