



High Air Temperature  
35°C (95°F) or above

1. Do not use the choke.
2. Start the engine following step 2 under “Normal Air Temperature”.

**NOTICE**

Extended use of the choke may impair piston and cylinder wall lubrication and damage the engine.

Low Air Temperature  
10°C (50°F) or below

1. Follow steps 1 – 3 under “Normal Air Temperature”.
2. Warm up the engine by opening and closing the throttle slightly.
3. Continue warming up the engine until it will idle smoothly with the choke lever pushed down all the way to Fully OFF (C).

