


AIR CLEANER

Refer to the Safety Precautions on page 44.


The air cleaner should be serviced at regular intervals (page 46). Service more frequently when riding in unusually wet or dusty areas.

1. Remove the right side cover (page 31).
2. Remove the screws (1) and air cleaner housing cover (2).

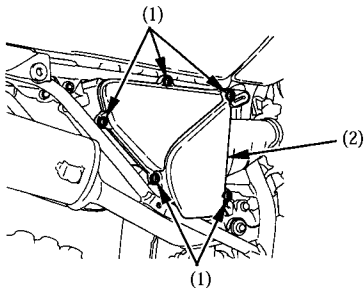

- (1) Screws
(2) Air cleaner housing cover

3. Unhook the set spring (3), take care to avoid bending the set spring and set spring holder (4).
4. Remove the air cleaner (5).

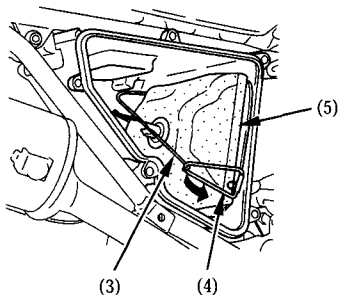

- (3) Set spring
(4) Set spring holder
(5) Air cleaner