


- Apply the brake, release it, then spin the wheel and check that it rotates freely. Repeat this procedure several times.
- Check free play by pulling in slowly on the front brake lever until the brake starts to engage.

Free play:

10 – 20 mm (0.4 – 0.8 in)

If brake lever free play is not within this range, see your Honda dealer.

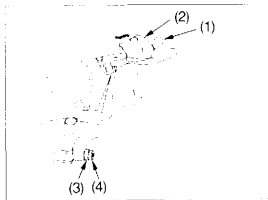


- Front brake lever
- Dust cover
- Lock nut
- Adjuster

Rear Brake

Pedal height adjustment

- Place the motorcycle on its side stand.
- The stopper bolt (1) is provided to allow adjustment of the pedal height.

To adjust the pedal height, loosen the lock nut (2) and turn the stopper bolt. Tighten the lock nut.

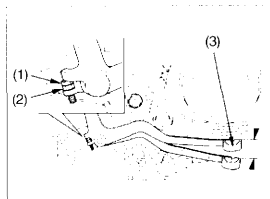

- Stopper bolt
- Lock nut
- Rear brake pedal

Other checks

Make sure there are no fluid leaks. Check for deterioration or cracks in the hoses and fittings.