


- (2) Dust cover
- (3) Upper lock nut
- (4) Upper clutch cable adjuster
- (A) Increase free play
- (B) Decrease free play

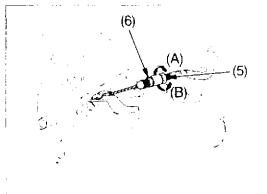

- (5) Lower adjusting nut
- (6) Lower lock nut
- (A) Increase free play
- (B) Decrease free play

3. If the adjuster is threaded out near its limit or if the correct free play cannot be obtained, loosen the upper lock nut (3) and turn in the upper clutch cable adjuster (4) completely. Tighten the upper lock nut and pull the dust cover (2) back to its normal position.
4. Hold the lower adjusting nut (5) and loosen the lower lock nut (6) at the lower end of the cable. Turn the lower adjusting nut to obtain the specified free play. Tighten the lower lock nut and check the adjustment.

5. Start the engine, pull in the clutch lever and shift into gear. Make sure the engine does not stall and the motorcycle does not creep. Gradually release the clutch lever and open the throttle. The motorcycle should begin to move smoothly and accelerate gradually.

If proper adjustment cannot be obtained or the clutch does not work correctly, see your Honda dealer.

Other checks

Check the clutch cable for kinks or signs of wear that could cause sticking or failure. Lubricate the clutch cable with a commercially available cable lubricant to prevent premature wear and corrosion.