

ENGINE OIL

Engine Oil Level Check

Check the engine oil level each day before operating the motorcycle.

The oil filler cap/dipstick (1) is at the rear of the right crankcase cover and contains a dipstick for measuring the oil level. Oil level must be maintained between the upper (2) and lower (3) level marks on the filler cap/dipstick (1).

1. Hold the motorcycle on upright firm level ground.
2. Start the engine and let it idle for a few minutes.
3. Stop the engine. After a few minutes, remove the oil filler cap/dipstick (1) and wipe it clean, then reinsert the dipstick without screwing it in.


Remove the dipstick. The oil level should be between the upper (2) and lower (3) level marks on the dipstick.

4. If required, add the specified oil (see page 60) up to the upper level mark. Do not overfill.

5. Reinstall the oil filler cap/dipstick. Check for oil leaks.

NOTICE

Running the engine with insufficient oil can cause serious engine damage.

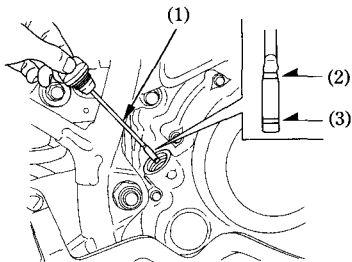

(1) Filler cap/dipstick

(2) Upper level mark

(3) Lower level mark