

9. Clutch – check operation, and adjust if necessary (pages 19 – 20).
10. Lights – check that headlight function properly. (only for “U” type).
11. Spark plug and high tension terminal – check for looseness.
12. Engine stop button – check for proper function (page 32).
13. Nuts, bolts, fasteners – check the front wheel to see that the axle nut and axle holder nuts are tightened securely. Check security of all other nuts, bolts, and fasteners.