


1. Remove the oil filler cap/dipstick from the right crankcase cover.
 2. Place a drain pan under the crankcase.
 3. Remove the oil drain bolt (1), O-ring (2), spring (3) and oil strainer screen (4).
 4. Clean the oil strainer screen.
 5. Check that the oil strainer screen, sealing rubber and drain bolt O-ring are in good condition.
 6. Install the O-ring to the oil drain bolt.
 7. Install the oil strainer screen, spring and drain bolt.
- Oil drain bolt torque:
 15 N·m (1.5 kgf·m , 11 lbf·ft)
8. Fill the crankcase with the recommended grade oil; approximately:
 1.0 ℓ (1.1 US qt , 0.9 Imp qt)

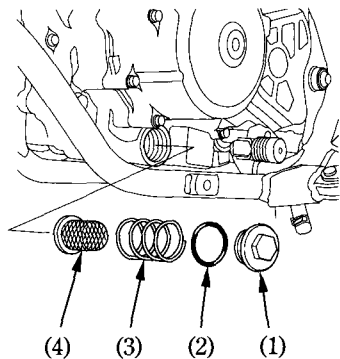

- | | |
|--------------------|-------------------------|
| (1) Oil drain bolt | (3) Spring |
| (2) O-ring | (4) Oil strainer screen |