


Exhaust Pipe/Muffler

Exhaust Pipe Removal


1. Remove the muffler (page 87).
2. Remove the exhaust joint pipe (page 89).
3. Remove the exhaust pipe joint nuts (1), exhaust pipe (2) and old gasket (3).

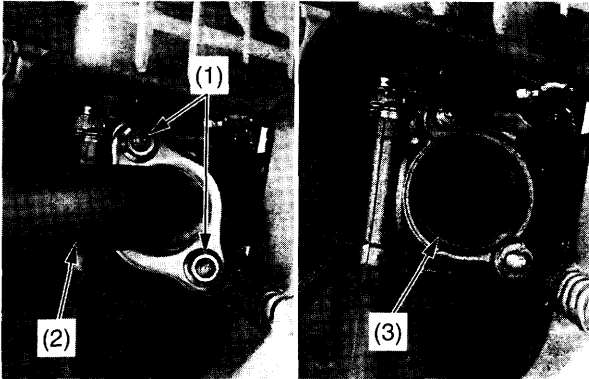

- (1) exhaust pipe joint nuts
(2) exhaust pipe
(3) gasket (old)

Exhaust Pipe Installation

1. Install a new exhaust pipe gasket (1) as shown.
2. Install the exhaust pipe (2) and exhaust pipe joint nuts (3)

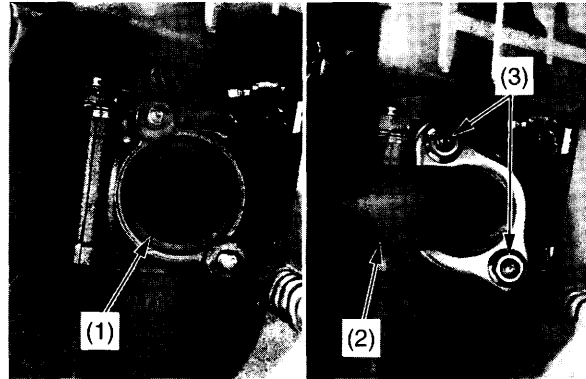

- (1) exhaust pipe gasket (new)
(2) exhaust pipe
(3) exhaust pipe joint nuts

3. Install the exhaust joint pipe (page 89) but do not tighten the bolt yet.
4. Install the muffler (page 88) but do not tighten the bolt yet.
5. Tighten the exhaust pipe joint nuts to the specified torque:
21 N·m (2.1 kgf·m, 15 lbf·ft)
6. Tighten the joint pipe clamp bolt and exhaust joint pipe mounting bolt (page 89).
7. Tighten the muffler clamp bolts and muffler mounting bolts (page 88).
8. Installation can be done in the reverse order of removal.