

Contents

| | | |
|---|--|---|
| MOTORCYCLE SAFETY.....1 | <i>Service Procedures</i> | Tire Selection for Track Conditions.....137 |
| Important Safety Information.....2 | <u>Fluids & Filters</u> | Personal Fit Adjustments138 |
| Important Safety Precautions.....2 | Fuel System.....41 | TIPS.....139 |
| Loading.....3 | Engine Oil.....43 | Transporting Your Motorcycle.....140 |
| Accessories & Modifications.....4 | Transmission Oil.....46 | Storing Your Honda.....141 |
| Safety Labels.....5 | Coolant.....48 | You & the Environment.....143 |
| OPERATING CONTROLS.....7 | Air Cleaner.....51 | Troubleshooting.....144 |
| Operation Component Locations.....8 | Crankcase Breather.....53 | TAKING CARE OF THE |
| BEFORE RIDING.....9 | <u>Engine</u> | UNEXPECTED.....145 |
| Are You Ready to Ride?.....10 | Throttle.....54 | If a Fuse Blows.....146 |
| Is Your Motorcycle Ready to Ride?.....11 | Clutch System.....56 | If Your Battery Is Low (or Dead).....147 |
| Pre-ride Inspection.....11 | Hot Start Lever.....60 | TECHNICAL INFORMATION.....149 |
| BASIC OPERATING INSTRUCTIONS.....13 | Spark Plug.....61 | Vehicle Identification.....150 |
| Safe Riding Precautions.....14 | Exhaust Pipe/Muffler.....62 | Specifications.....151 |
| Starting & Stopping the Engine.....15 | Spark Arrester.....65 | Torque Specifications.....154 |
| Shifting Gears.....17 | Valve Clearance.....66 | High Altitude Carburetor Adjustment.....157 |
| Braking.....18 | Piston/Piston Rings/Piston Pin.....74 | Emission Control Systems.....158 |
| Parking.....19 | <u>Chassis</u> | Oxygenated Fuels.....160 |
| Post-ride Inspection.....20 | Suspension.....82 | Competition Logbook.....161 |
| Break-in Guidelines.....21 | Brakes.....86 | Optional Parts List.....163 |
| SERVICING YOUR HONDA.....23 | Wheels.....90 | Spare Parts & Equipment.....164 |
| <i>Before You Service Your Honda</i> | Tires & Tubes.....91 | Wiring Diagram.....165 |
| The Importance of Maintenance.....24 | Side Stand.....93 | CONSUMER INFORMATION.....167 |
| Maintenance Safety.....25 | Drive Chain.....94 | Authorized Manuals.....168 |
| Important Safety Precautions.....25 | Additional Maintenance Procedures.....97 | Warranty Coverage.....169 |
| Maintenance Schedule.....26 | <u>Electrical</u> | Warranty Service.....170 |
| General Competition Maintenance.....29 | Battery.....99 | Contacting Honda.....171 |
| Before & After Competition Maintenance.....33 | Headlight & Taillight.....101 | Your Honda Dealer.....172 |
| Between Motos & Practice Maintenance.....33 | Appearance Care.....102 | The Honda Rider's Club (USA only).....173 |
| After Competition Maintenance.....33 | ADJUSTMENTS FOR COMPETITION...105 | TABLE OF CONTENTS.....174 |
| <i>Service Preparations</i> | Front Suspension Adjustments.....106 | INDEX.....176 |
| Maintenance Component Locations.....35 | Rear Suspension Adjustments.....120 | QUICK REFERENCE |
| Seat Removal.....36 | Suspension Adjustments for Track | |
| Fuel Tank Removal.....37 | Conditions.....124 | |
| Subframe Upright Position.....39 | Suspension Adjustment Guidelines.....125 | |
| | Carburetor Adjustment & Turning Tips.....128 | |
| | Chassis Adjustments.....135 | |
| | Gearing.....136 | |