


Fluid Level Inspection

Front Brake Fluid Level Check

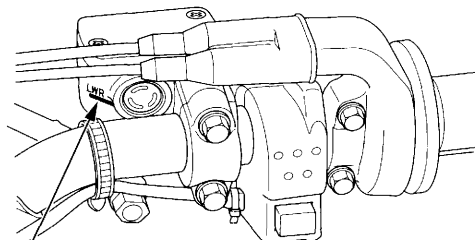

(1)

(1) LWR (LOWER) level mark


With the motorcycle in an upright position, check the fluid level.

It should be above the LWR (LOWER) level mark (1). If the level is at or below the LWR (LOWER) level mark, check the brake pads for wear (page 89).

Worn brake pads should be replaced. If the pads are not worn, have your brake system inspected for leaks.

If the front brake lever freeplay exceeds 0.8 in (20 mm), there is probably air in the brake system and it must be bled. Refer to the Honda Service Manual or see your Honda motorcycle dealer for brake bleeding.

Rear Brake Fluid Level Check

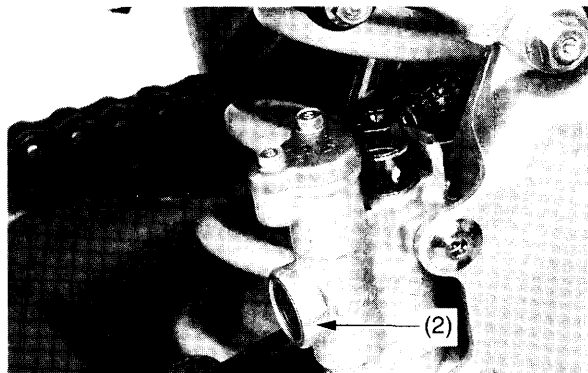

(2) LOWER level mark

With the motorcycle in an upright position, check the fluid level.

It should be above the LOWER level mark (2). If the level is at or below the LOWER level mark, check the brake pads for wear (page 89).

Worn brake pads should be replaced. If the pads are not worn, have your brake system inspected for leaks.

If the rear brake pedal freeplay exceeds 0.8 in (20 mm), there is probably air in the brake system and it must be bled. Refer to the Honda Service Manual or see your Honda motorcycle dealer for brake bleeding.