


Refer to *Safety Precaution* on page 25.


Headlight Bulb

1. Remove the front visor bolts (1) and pull out the front visor (2).

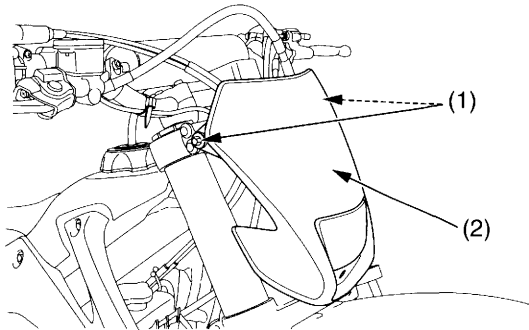


- (1) front visor bolts
(2) front visor

2. Disconnect the headlight connector (3). Remove the dust cover (4).

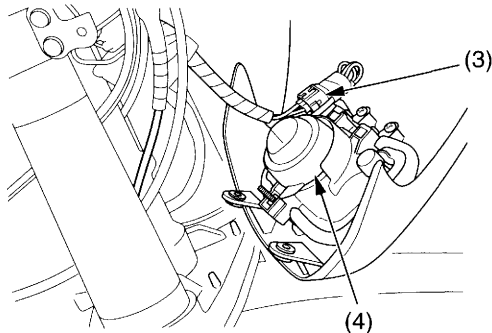

- (3) headlight connector
(4) dust cover

3. To pull the headlight bulb out, push and turn the headlight bulb socket (5) counterclockwise.

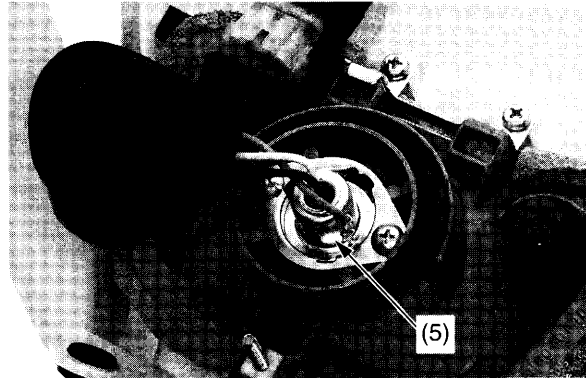


(5) headlight bulb socket

4. To install a new headlight bulb, push and turn the headlight bulb socket clockwise.

If you touch the bulb with your bare hands, clean it with a cloth moistened with denatured alcohol to prevent early bulb failure.

5. Install the dust cover (4) tightly against the headlight unit with its "TOP" mark (6) facing up.

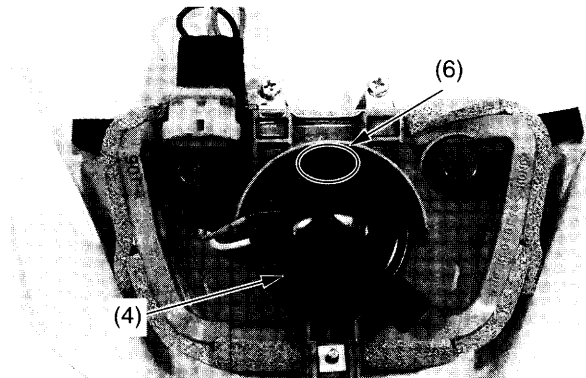


(4) dust cover

(6) "TOP" mark

6. To install the headlight, reverse the removal procedure.

Headlight Aim

The headlight aim can be raised or lowered. Turn the adjusting screw (1) clockwise to move the headlight up or turn the adjusting screw counterclockwise to move the headlight down to proper adjustment.

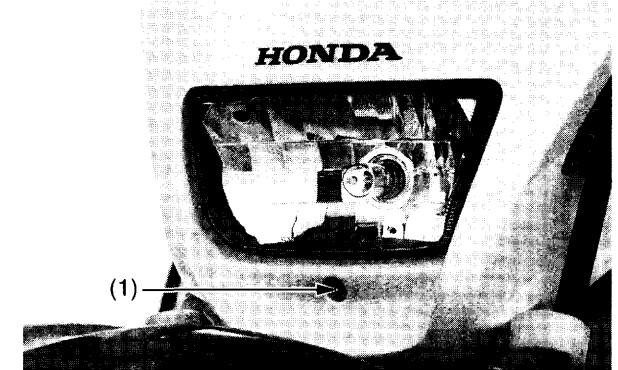

(1) adjusting screw

Taillight

The taillight uses LED illumination. If the taillight does not function properly, see your Honda dealer for service.

This model is equipped with an electric starter and battery for easy engine starting. There is a possibility of damage to the lighting system if the battery is carelessly removed. Never kick-start the engine without the battery connected.

If it becomes necessary to kick-start the engine with the battery removed, remove the relays to the battery to prevent damage to the lighting.