

Read this section carefully before you ride. It presents the location of the basic controls on your CRF.

Operation Component Locations	10
Indicator	11
MIL Blink Pattern.....	11
Current DTC/Freeze DTC	11
Circuit Inspection.....	12
DTC Index	13