

Maintenance Schedule

Perform the Pre-ride Inspection (page 17) at each scheduled maintenance period.

I: Inspect and Clean, Adjust, Lubricate or Replace if necessary. C: Clean. A: Adjust. L: Lubricate. R: Replace.

ITEMS	FREQUENCY	NOTE	Each race or about 2.5 hours	Every 3 races or about 7.5 hours	Every 6 races or about 15.0 hours	Every 9 races or about 22.5 hours	Every 12 races or about 30.0 hours	Ref. Page
FUEL LINE		(NOTE 6)	I				R	44
FUEL PUMP FILTER		(NOTE 6)					R	48
THROTTLE OPERATION			I					64
AIR FILTER		(NOTE 1)	C					60
CRANKCASE BREATHER			I					62
SPARK PLUG			I					71
VALVE CLEARANCE		(NOTE 4)			I			72 – 80
ENGINE OIL		(NOTE 3)	I		R			53
ENGINE OIL FILTER		(NOTE 3)			R			54
ENGINE IDLE SPEED			I					65
PISTON AND PISTON RINGS					R			81
PISTON PIN							R	84
TRANSMISSION OIL		(NOTE 5)	I		R			56
RADIATOR COOLANT		(NOTE 2)	I					58
COOLING SYSTEM			I					58
DRIVE CHAIN			I, L	R				102
DRIVE CHAIN SLIDER			I					102
DRIVE CHAIN ROLLER			I					103
DRIVE SPROCKET			I					104
DRIVEN SPROCKET			I					104
BRAKE FLUID		(NOTE 2)	I					96
BRAKE PADS WEAR			I					98
BRAKE SYSTEM			I					95
CLUTCH SYSTEM		(NOTE 5)	I					66
CONTROL CABLES			I, L					111
EXHAUST PIPE/MUFFLER			I					105
SUSPENSION			I					91, 92
SWINGARM/SHOCK LINKAGE				L				33, 92
FORK OIL EXCEPT DAMPER		(NOTE 3)		R				93
FORK OIL DAMPER						R		121
NUTS, BOLTS, FASTENERS			I					112, 154 – 156
WHEELS/TYRES			I					99 – 101
STEERING HEAD BEARINGS						I		111

*WE RECOMMENDED THESE ITEMS BE SERVICED BY REFERRING TO THE HONDA SHOP MANUAL.

This maintenance schedule is based upon average riding condition. Machine subjected to severe use require more frequent servicing.

- NOTE: 1. Clean after every heat for dusty riding condition.
 2. Replace every 2 years. Replacement requires mechanical skill.
 3. Replace after the first break-in ride.
 4. Inspect after the first break-in ride.
 5. Replace the transmission oil, if the clutch discs and plates are replaced.
 6. Replace every year.