

Subframe

7. Make sure the air cleaner connecting tube tab (11) aligns with the air cleaner connecting tube clamp hole (12).

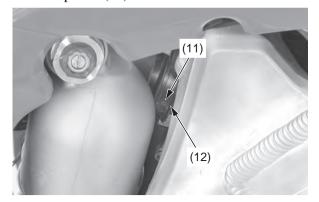


- (11) air cleaner connecting tube tab (12) air cleaner connecting tube clamp hole
- 8. Tighten the screw (13) on the air cleaner connecting tube clamp to the specified torque: 0.7 N·m (0.1 kgf·m, 0.5 lbf·ft) Check the distance between the band ends is 4.5 ± 1.5 mm $(0.18 \pm 0.06$ in).

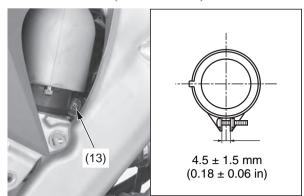


(13) screw

9. Hook the fuel tank band (14). Install the ECM mounting rubber (15) to the ECM bracket (16).

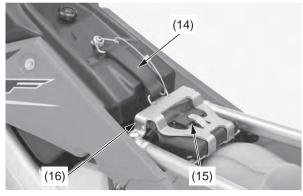


- (14) fuel tank band
- (15) ECM mounting rubber
- (16) ECM bracket
- 10. Connect the IAT sensor connector (17).

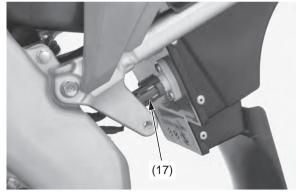


(17) IAT sensor connector

- 11. Remove the old gasket from exhaust pipe.
- 12. Install the muffler clamp (18) and a new gasket (19) to the exhaust pipe (20).

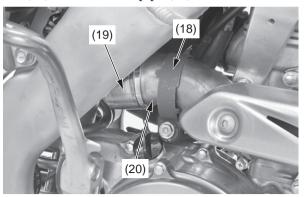

- (18) muffler clamp (19) gasket (new)
- (20) exhaust pipe
- 13. Install the muffler (21).
- 14. Install the muffler clamp (18) by aligning the tab (22) of the muffler clamp with the cutout (23) of the muffler.

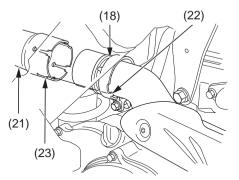

- (18) muffler clamp (21) muffler
- (22) tab
- (23) cutout