


Piston/Piston Rings/Piston Pin


14. Remove the shock absorber upper nut (10) and bolt (11).

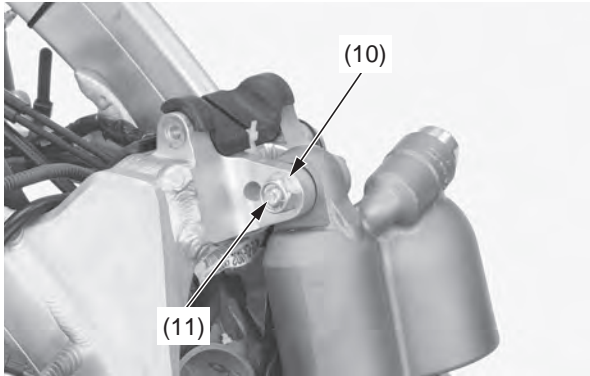

(10) shock absorber upper nut
(11) bolt



15. Loosen the insulator band screw (12) and pull the throttle body (13) out from the insulator (14).

Do not hang the throttle body and support it with a suitable strap.

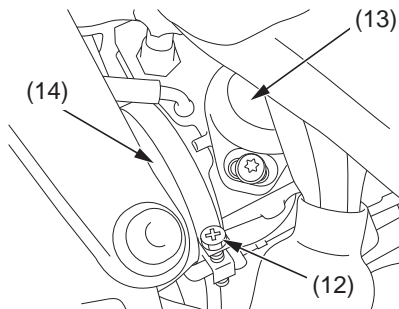

(12) insulator band screw
(13) throttle body
(14) insulator

16. Remove the cylinder head hanger bolts (15). Remove the cylinder head hanger plate bolts (16), left cylinder head hanger plate (17) and right cylinder head hanger plate (18).

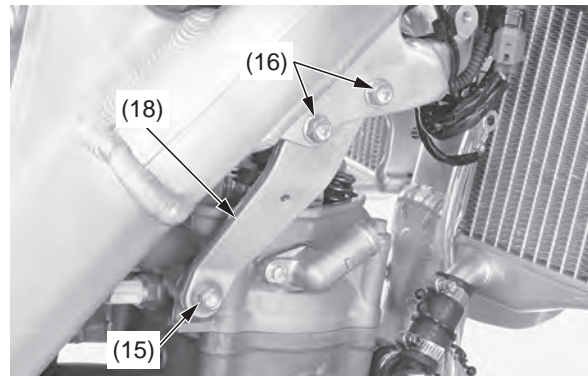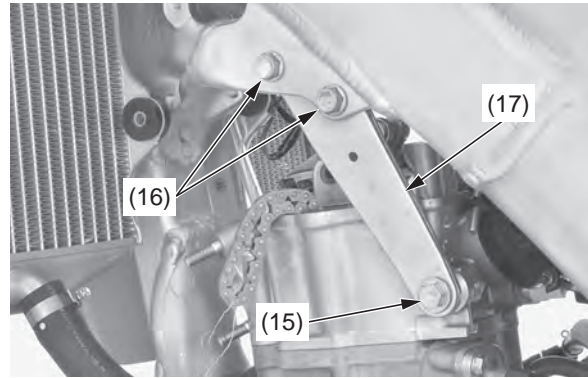


(15) cylinder head hanger bolts
(16) cylinder head hanger plate bolts
(17) left cylinder head hanger plate
(18) right cylinder head hanger plate

17. Remove the cylinder bolt (19).
18. Remove the cylinder head bolts, washers (20) and the cylinder head (21).

Loosen the bolts in a criss-cross pattern in two or three steps.

NOTICE

Do not let the washers and cam chain fall into the crankcase.

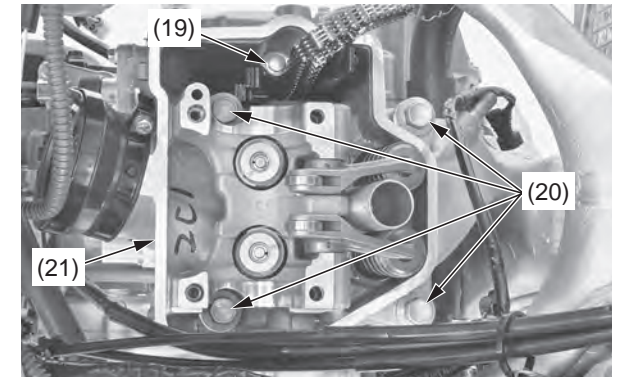

(19) cylinder bolt
(20) cylinder head bolts and washers
(21) cylinder head