

G

gap, spark plug.....	61
gasohol.....	166
gasoline.....	41
gearing.....	144
guidelines,	
steering damper.....	142
suspension adjustment.....	131
guidelines, suspension adjustment.....	131

H

handlebar inspection.....	102
Honda,	
contacting.....	177
Rider's Club.....	179
service manual.....	174
your dealer.....	178

I

identification, vehicle.....	158
idle speed, engine.....	140
inspection, pre-ride.....	11

L

labels, safety.....	5
logbook, competition.....	167

M

maintenance,	
after competition.....	33
before & after competition.....	33
between motos & practice.....	33
component locations.....	35
general competition.....	29
importance.....	24
safety.....	25
schedule.....	26, 27, 28
manual, service.....	174
modifications.....	4

O

oil,	
engine.....	43
fork.....	86
transmission.....	46
operating,	
controls.....	7
instructions.....	13
operation component locations.....	8
optional,	
parts list.....	169
sprockets.....	169
oxygenated fuels.....	166

P

pads, brake.....	91
parts, optional.....	169
personal fit adjustments.....	146
pinging, engine.....	41
plug, spark.....	61
pre-load, rear suspension.....	126
pre-ride inspection.....	11
protective apparel.....	2

R

rear suspension maintenance.....	85
Rider's Club Honda.....	179
riding,	
apparel.....	2
basic operation.....	13
before.....	9
important safety information.....	2
safety precautions.....	2

S

safety,	
a few words about.....	Safety Messages
important information.....	2
important precautions.....	2
labels.....	5
maintenance.....	25
riding precautions.....	14
schedule, maintenance.....	26, 27, 28
serial numbers.....	158
service,	
customer.....	178
manuals.....	174
warranty.....	176
side stand.....	14, 95
spare parts.....	170
spark arrester.....	65
spark knock.....	41
spark plug.....	61
maintenance.....	61
specifications.....	159
spring pre-load, rear suspension.....	126
starting,	
engine.....	15
troubleshooting.....	152
steering damper,	
adjustment.....	141
guidelines.....	142
operation inspection.....	99

(cont'd)