

Maintenance Schedule

Items	Frequency	Whichever Comes First ⇒	Initial Maint.	Regular Maint. Interval				Refer to page:		
				mi	100	600	1,200		1,800	2,400
				km	150	1,000	2,000		3,000	4,000
Note	Month	1	6	12	18	24				
NON-EMISSION RELATED ITEMS		Drive Chain	Note 1	I, L	I, L: every 300 mi (500 km) or 3 month				100	
		Drive Chain Slider			I	I	I	I	101	
		Brake Shoe Wear			I	I	I	I	88	
		Brake System		I	I	I	I	I	85	
		Clutch System		I	I	I	I	I	72	
		Side Stand				I		I	99	
	*	Suspension				I		I	82	
	*	Spark Arrester			C: every 1,000 mi (1,600 km) or every 100 operating hours				80	
	*	Nuts, Bolts, Fasteners		I		I		I	—	
	**	Wheels/Tires		I	I	I	I	I	90, 95	
	**	Steering Head Bearings		I		I		I	—	

* Should be serviced by your Honda dealer, unless the owner has the proper tools and service data and is mechanically qualified.

Refer to the official Honda Service Manual (page 146).

** In the interest of safety, we recommend these items be serviced only by your Honda dealer.