

Maintenance Schedule

| Items | Frequency | Whichever Comes First ⇒ | Initial Maint. | Regular Maint. Interval | | | | Refer to page: |
|---------------------------|-----------|----------------------------|----------------|-----------------------------------------------------------|-------|-------|-------|----------------|
| | | | mi | 600 | 1,200 | 1,800 | 2,400 | |
| | | | km | 1,000 | 2,000 | 3,000 | 4,000 | |
| Note | Month | 1 | 6 | 12 | 18 | 24 | | |
| Drive Chain | | Note 1 | I, L | I, L: every 300 mi (500 km) or 3 month | | | | 101 |
| Drive Chain Slider | | | | I | I | I | I | 102 |
| Brake Shoe Wear | | | | I | I | I | I | 89 |
| Brake System | | | I | I | I | I | I | 86 |
| Clutch System | | | I | I | I | I | I | 73 |
| Side Stand | | | | | I | | I | 100 |
| * Suspension | | | | | I | | I | 83 |
| * Spark Arrester | | | | C: every 1,000 mi (1,600 km) or every 100 operating hours | | | | 81 |
| * Nuts, Bolts, Fasteners | | | I | | I | | I | — |
| ** Wheels/Tires | | | I | I | I | I | I | 91, 96 |
| ** Steering Head Bearings | | | I | | I | | I | — |

* Should be serviced by your Honda dealer, unless the owner has the proper tools and service data and is mechanically qualified. Refer to the official Honda Service Manual (page 146).

** In the interest of safety, we recommend these items be serviced only by your Honda dealer.