

MAJOR COMPONENTS

(Information you need to operate this motorcycle)

BRAKES

Front Brake

Brakes are items of personal safety and should always be maintained in proper adjustment.

The distance the front brake lever or rear brake pedal moves before the brake starts to engage is called freeplay.


Measured at the tip of the front brake lever (1), freeplay should be maintained at:

20–30 mm (0.8–1.2 in)


Adjust the freeplay of the brake lever with the front wheel pointed straight ahead.

Adjustment:

1. Pull back the rubber dust cover (2). Loosen the lock nut (3) and turn the cable adjuster (4). Tighten the lock nut and check the adjustment.

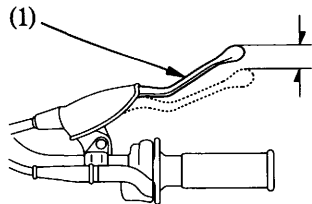

(1) Front brake lever

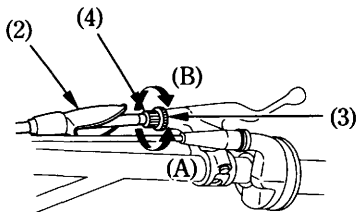

- | | |
|-----------------------|-----------------------|
| (2) Rubber dust cover | (A) Decrease freeplay |
| (3) Lock nut | (B) Increase freeplay |
| (4) Cable adjuster | |