



## REAR SUSPENSION

Refer to the Safety Precautions on page 48 .

Check the rear suspension periodically by careful visual examination. Note the following items:

1. Swingarm bushings (1) should be checked by pushing hard against the side of the rear wheel while the motorcycle is on a support block and feeling for looseness of the bushings.
2. Check all suspension component attachment points (2) for security of their fasteners.
3. Check for oil leaks in the shock absorber units.

If any suspension components appear worn or damaged, consult your Honda dealer for further inspection. The suspension components are directly related to safety and your Honda dealer is qualified to determine whether or not replacement parts or repairs are needed.

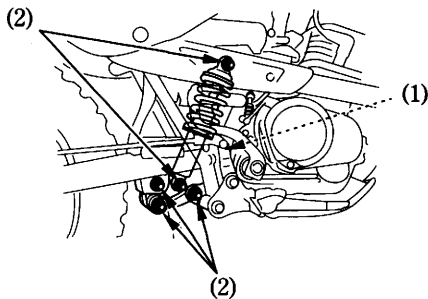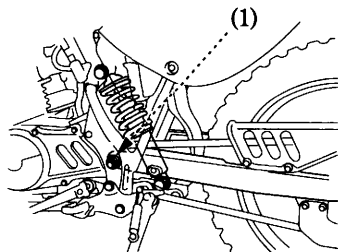

- (1) Swingarm bushings  
(2) Attachment points