

ITEM	FREQUENCY	WHICHEVER COMES FIRST ↓	ODOMETER (NOTE 3)				Page	
			EVERY	1,000km (600mi)	4,000km (2,500mi)	8,000km (5,000mi)		12,000km (7,500mi)
				I, L EVERY 1,000 km (600 mi)				
	DRIVE CHAIN	(NOTE 2)	I, L EVERY 1,000 km (600 mi)				74	
	BATTERY		I	I	I	92		
	BRAKE SHOE WEAR		I	I	I	84		
	BRAKE SYSTEM		I	I	I	80		
*	BRAKE LIGHT SWITCH		I	I	I	98		
*	HEADLIGHT AIM		I	I	I	—		
	CLUTCH SYSTEM		I	I	I	72		
	SIDE STAND		I	I	I	—		
*	SUSPENSION		I	I	I	86		
*	NUT, BOLT, FASTENER	(NOTE 2)	I	I	I	—		
**	WHEEL	(NOTE 2)	I	I	I	—		
**	STEERING HEAD BEARING		I	I	I	—		

* Should be serviced by an authorized HONDA dealer, unless the owner has proper tools and service data and is mechanically qualified. Refer to the official HONDA shop manual.

** In the interest of safety, we recommended these items be serviced ONLY by an authorized HONDA dealer.

NOTE:

1. Service more frequently when riding in dusty areas.
2. Service more frequently when riding OFF-ROAD.
3. For higher odometer readings, repeat at the frequency interval established here.