

ITEM	FREQUENCY	WHICHEVER COMES FIRST ↓	ODOMETER (NOTE 3)				Page
			1,000km (600mi)	6,000km (3,600mi)	12,000 km (7,200mi)	18,000km (10,800mi)	
		EVERY					
	DRIVE CHAIN		I, I EVERY 1,000km (600mi)				150
	BATTERY	MONTH I	I	I	I	I	170
	BRAKE SHOE WEAR			I	I	I	160
	BRAKE SYSTEM		I	I	I	I	152
*	BRAKE LIGHT SWITCH		I	I	I	I	180
*	HEADLIGHT AIM		I	I	I	I	—
	CLUTCH		I	I	I	I	142
	SIDE STAND			I	I	I	—
*	SUSPENSION		I	I	I	I	162
*	NUTS, BOLTS, FASTENERS	NOTE2	I	I	I	I	—
**	WHEELS/SPOKES	NOTE2	I	I	I	I	—
**	STEERING HEAD BEARING		I		I		—

\* Should be serviced by an authorized HONDA dealer, unless the owner has proper tools and service data and is mechanically qualified. Refer to the official HONDA shop manual.

\*\* In the interest of safety, we recommended these items be serviced ONLY by an authorized HONDA dealer.

**NOTE:**

1. Service more frequently when riding in dusty areas.
2. Service more frequently when riding OFF-ROAD.
3. For higher odometer readings, repeat at the frequency interval established here.