


● KICK STARTER PEDAL

The kick starter pedal is located at the right side of the engine.

Operate the kick starter pedal with the right foot, starting from the top of the stroke and following through with a rapid and continuous kick.

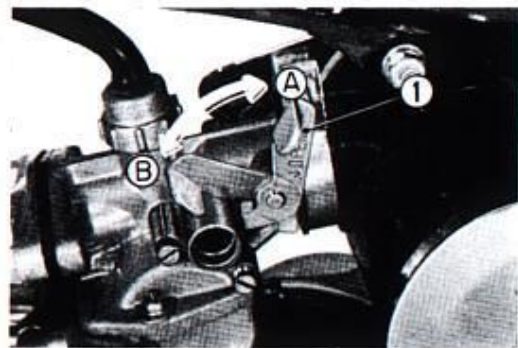

① Choke lever

● CHOKE LEVER

The choke lever ① is located at the left side of the carburetor.

When the choke lever is up ① (normal driving position), the choke is fully open.

When the choke lever is down ② the choke is fully closed (cold engine starting position).