


■ MAINTENANCE OPERATIONS

● OIL CHANGE

As the effectiveness of engine oil is limited to a certain period, it is necessary to perform oil changes at suggested intervals shown in the service schedule. When draining the oil, it should be performed while the engine is still warm as this will assure complete and rapid draining, saving much time.

1. Remove the oil filler cap ① from the R crankcase cover.
2. Place a drip pan under the crankcase to catch the oil and then remove the drain plug ④ (page 27) with 17 mm wrench.
3. After the oil stops draining from the crankcase, operate the kick starter several times to drain any oil which may be left in the engine.
4. When the oil has been completely drained, reinstall the drain plug ④, making sure that the O ring used on the

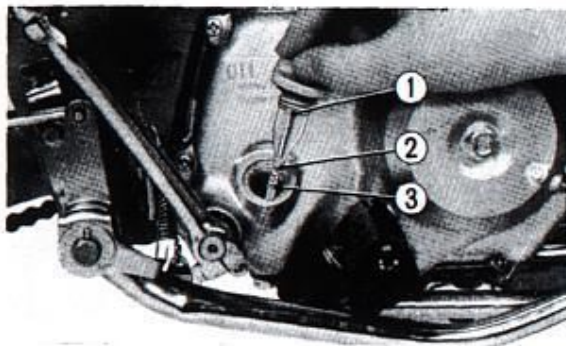

- ① Oil filler cap
- ② Upper level mark
- ③ Lower level mark