



2. Rear wheel

- Unscrew the drive chain adjusting nut and rear wheel axle nut.
- Remove the chain joint clip and drive chain.
- Unscrew the rear brake adjusting nut and disassemble the rear brake rod from the rear brake arm.
- Pull out the cotter pin 3, loosen the lock nut 4 and remove the torque arm setting bolt 5.
- Pull out the rear wheel axle and then the rear wheel can be disassembled from the frame.

Note: 1. Standard tire air pressure is 20 p.s.i. (1.4 kg/cm²).

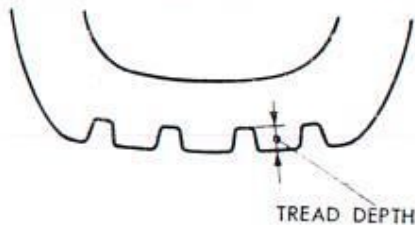

2. The tire should be replaced when the tread has been worn to less than 0.04 in. (1mm) depth. Riding with worn tire is a hazard.

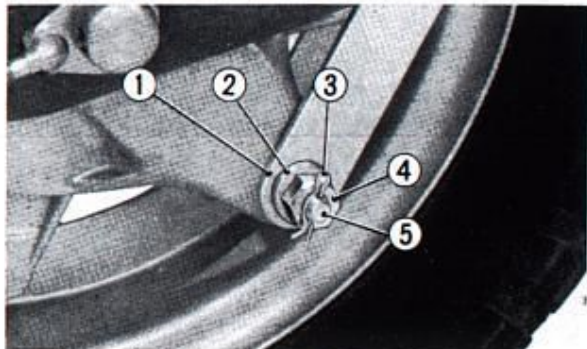

- 1 Rear brake torque arm
- 2 Washer
- 3 Cotter pin
- 4 Lock nut
- 5 Torque arm setting bolt