


● STOP LIGHT SWITCH ADJUSTMENT

The stop light switch adjustment is made at the stop light switch ② located on the right side toward the rear of the engine.

1. First check the adjustment of the rear brake pedal in accordance with the procedure on page 42~43 to make sure that the brakes are properly adjusted.
2. Turn on the ignition switch (ignition position "Red" dot.)
3. Adjust the stop light switch ② so that the stop light will come on when the brake pedal, or rear brake lever, is depressed to the point where the brake just starts to take hold. If the stop light switch is late in switching on the stop light, screw in ① the switch adjusting nut and if the stop light comes on too early screw out ③ the switch adjusting nut.

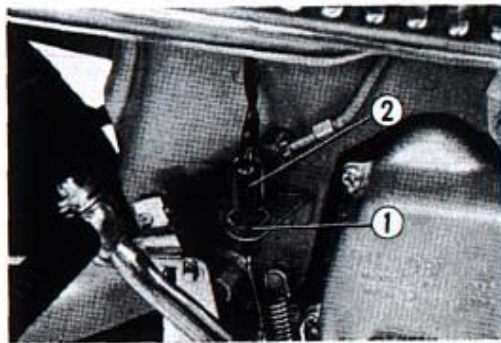

- ① Adjusting nut
② Stoplight switch