

2. Tail/stoplight bulb replacement procedure

- Remove the two screws retaining the tail/stoplight lens.
- Press the bulb inward and twist to the left, and the bulb can be removed.
- When installing the taillight lens, do not over tighten the screws, as this may damage the lens.



① Tail/stoplight bulb