

- Only operate audio buttons when safe to do so.
- Set the volume at a level that still allows horns and emergency vehicles to be heard.
- The audio system can play tracks and perform track selection. Album selection, play mode (Repeat, shuffle, etc.) change and other operations cannot be performed on the audio system. Set up those functions in each audio device to connect in advance.
- Some audio devices, USB flash drives and *Bluetooth*® sound devices may not be compatible.
- Use any audio devices, USB flash drives and *Bluetooth*® sound devices at your own risk.
- We shall not be liable for any damages or troubles in use of audio devices and USB flash drives.

### **About *Bluetooth*® audio**

- Only one *Bluetooth*® audio device and only one *Bluetooth*® sound device can be paired with the audio system at a time. When another device is registered, the information on the previously registered device is canceled.
- If you receive a call to a paired phone while it is playing, the paired phone may stop playing.
- When unable to connect your *Bluetooth*® device to the audio system or when sounds skip or noises mix while playing, change the storage location of the *Bluetooth*® device.