


Blown Fuse

Before handling fuses, see “Inspecting and Replacing Fuses.” ► P. 78

■ Fuse Box Fuses

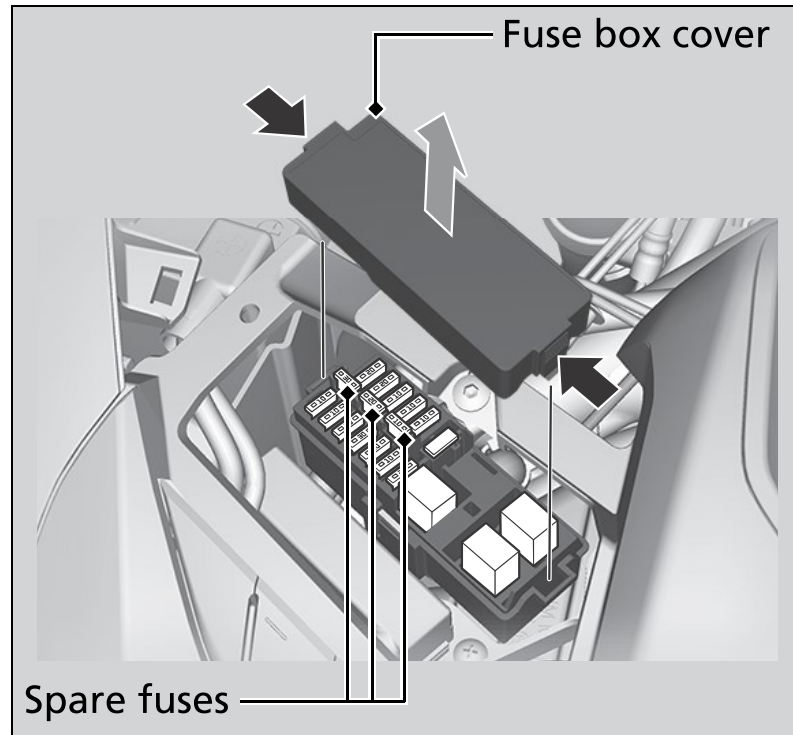

1. Remove the left inner panel. ► P. 87
2. Remove the left fairing pocket. ► P. 91
3. Remove the fuse box cover.
4. Pull the fuses out one by one with the fuse puller in the tool kit (► P. 67) and check for a blown fuse. Always replace a blown fuse with a spare of the same rating.
5. Reinstall the fuse box cover.
6. Install the parts in the reverse order of removal.