
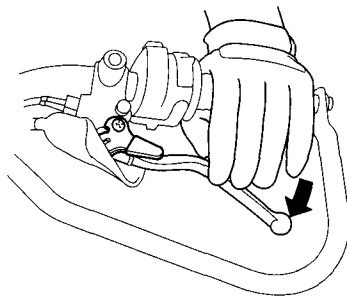


To release the clutch lock lever:

The clutch lock lever (2) automatically released when you squeeze the clutch lever (1).

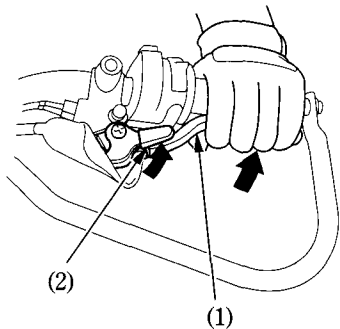

- (1) Clutch lever
- (2) Clutch lock lever