

SHIFTING

Proper shifting can prevent damaging the engine and transmission.

Upshifting

The upper limit speed of each gear is shown in gear range (page 13).

Upshift to a higher gear before exceeding the upper limit speed.

Upshifting at speeds higher than the upper limit speed can cause damage to the engine.

Downshifting

Downshifting at speeds higher than those in the table below may overrev the engine and can cause damage to the engine and transmission.

Follow the table below when downshifting the gears.

Downshifting Acceptable Speed		
5th	4th	85km/h(53mph) or less
4th	3rd	65km/h(40mph) or less
3rd	2nd	50km/h(31mph) or less
2nd	1st	30km/h(19mph) or less