

Adjusting the Brake Light Switch

Check the operation of the brake light switch.

1. Remove the right under cowl lid by removing the clip. ► P. 65

2. Hold the brake light switch and turn the adjusting nut in the direction A if the switch operates too late, or turn the nut in the direction B if the switch operates too soon.

