


Ignition Switch

The ignition switch (1) is below the indicator panel.

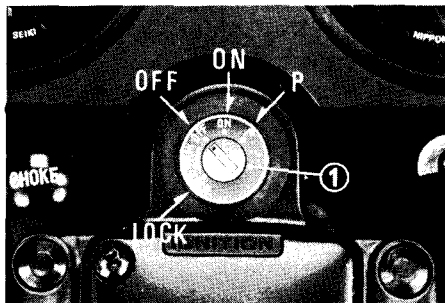

(1) Ignition switch

| Key Position | Function | Key Removal |
|-------------------------|---|------------------------|
| LOCK (Steering lock) | Steering is locked. All circuits are off and the engine cannot be started. See page 18. | Remove the key. |
| OFF | All electrical circuits are open, the engine cannot be started. | Key can be removed. |
| ON (red dot) | Engine can be started when engine stop switch is at "RUN". All lights are ON. | Key cannot be removed. |
| P | For parking the motorcycle near traffic. The taillight will be on but all other circuits are off. | Remove the key. |