

## ENGINE OIL


### Engine Oil Level Check

Check engine oil level each day before operating the motorcycle.

1. Run the engine to make sure the oil pressure warning light goes off. If the oil pressure warning light remains on, stop the engine immediately.
2. Stop the engine and put the motorcycle on its center stand on level ground.
3. Remove the oil filler cap/dipstick (1), wipe it clean, and reinsert the dipstick without screwing it in. The oil level should be between the upper (2) and lower (3) marks on the dipstick.
4. Add the specified oil up to the upper level mark, if required.
5. Replace the filler cap/dipstick.

### CAUTION

\* *Running the engine with insufficient oil can cause serious engine damage.*

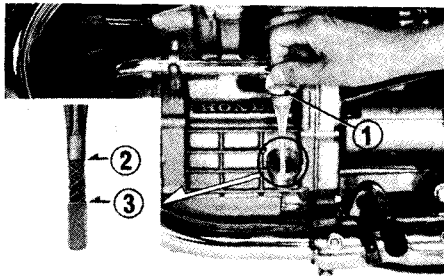

- (1) Filler cap/dipstick (3) Lower level mark  
(2) Upper level mark