


Oil Filter Element Replacement

NOTE

- * Do this maintenance before filling with engine oil.
- 1. Remove the oil filter lock bolt, and pull the oil filter element (2) out from the oil filter case.
- 2. Insert a new oil filter element and retighten the oil filter lock bolt.
- 3. Perform the step 7 to 10 of Engine Oil Change.

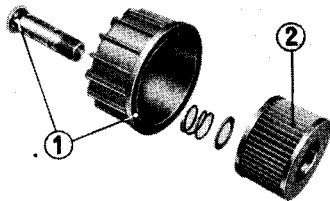

- (1) O-rings
- (2) Oil filter element