


3. Free play is 20–30 mm (3/4–1-1/4 in.).
If adjustment is necessary, turn the rear brake adjusting nut (4).

NOTE

- * Make sure that the cut-out on the adjusting nut is seated on the brake arm pin after the final adjustment has been made.

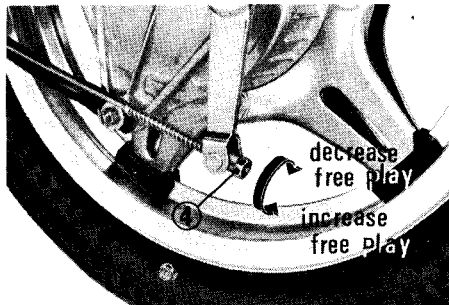

(4) Adjusting nut


Wear indicator:

When the rear brake is applied, an arrow (3), adjacent to the rear brake arm (4), moves toward a reference mark (2) on the rear brake backing plate (1).

If the arrow aligns with the reference mark on full application of the rear brake, the brake shoes must be replaced.

Other items:

Make sure that the brake rod, brake arm, springs and the fastener are in good condition.

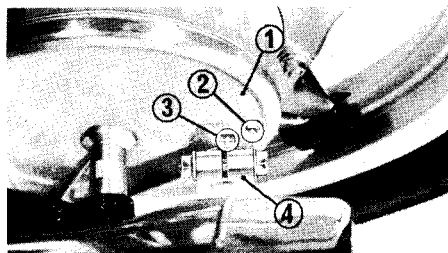

(1) Brake backing plate (3) Arrow
(2) Reference mark (4) Brake arm