

## Battery

If the motorcycle is operated with insufficient battery electrolyte, sulfation and battery plate damage will occur.

If rapid loss of electrolyte is experienced, or if your battery seems to be weak, causing slow starting or other electrical problems, see your authorized Honda dealer.


### Battery electrolyte:

The battery (1) is under the seat. Remove the left side cover. Check the battery electrolyte.

The electrolyte level must be maintained between the upper (2) and lower (3) level marks on the side of the battery. If the electrolyte level is low, loosen the nut (4) and open the bracket (5) for access of the battery, remove the battery filler caps (6). Carefully add distilled water until the electrolyte level in each cell is between the upper and lower level marks. Use a small syringe or plastic funnel to add water.

## NOTE

\* Use only distilled water in the battery. Tap water will shorten the service life of the battery.

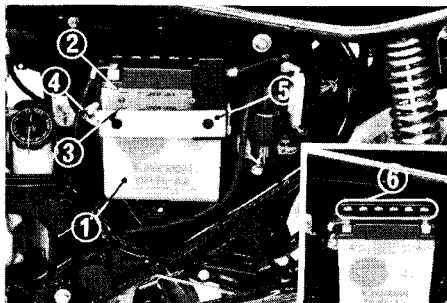

- |                      |                         |
|----------------------|-------------------------|
| (1) Battery          | (4) Nut                 |
| (2) Upper level mark | (5) Bracket             |
| (3) Lower level mark | (6) Battery filler caps |