

## MAINTENANCE SCHEDULE

The following Maintenance Schedule specifies all maintenance required to keep your scooter in peak operating condition. Maintenance work should be performed in accordance with standards and specifications of Honda by properly trained and equipped technicians. Your Honda dealer meets all of these requirements.

Perform the Pre-ride Inspection (page 46) at each scheduled maintenance period.

I: INSPECT AND CLEAN, ADJUST, LUBRICATE OR REPLACE IF NECESSARY

C: CLEAN R: REPLACE A: ADJUST L: LUBRICATE

ITEM		FREQUENCY	WHICHEVER →		ODOMETER READING [NOTE(1)]								REFER TO PAGE
		COMES FIRST ↓	× 1,000 km	1	6	12	18	24	30	36			
			× 1,000 mi	0.6	4	8	12	16	20	24			
		NOTE	MONTH	6	12	18	24	30	36				
*	FUEL LINE					I		I		I		—	
*	THROTTLE OPERATION					I		I		I		—	
	AIR CLEANER	(NOTE 2)					R			R		67	
	CRANKCASE BREATHER	(NOTE 3)			C	C	C	C	C	C		72	
	SPARK PLUG				I	R	I	R	I	R		76	
*	VALVE CLEARANCE			I		I		I		I		—	
	ENGINE OIL			R	EVERY 3,000km (2,000mi)					R		73	
*	ENGINE OIL STRAINER SCREEN					C		C		C		—	
*	ENGINE IDLE SPEED			I	I	I	I	I	I	I		78	
	RADIATOR COOLANT	(NOTE 4)				I		I		R		25	
*	COOLING SYSTEM					I		I		I		—	