


TRANSPORTING

▲WARNING

- To prevent the possibility of a fire or explosion when transporting the scooter, always:
 - Drain the fuel tank and carburetor.
 - Carry the scooter upright in its normal riding position to prevent oil and battery electrolyte from leaking.

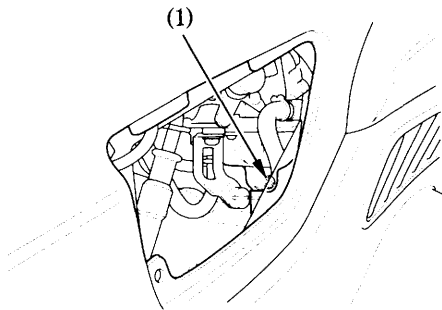

(1) Drain screw

Draining Fuel

Perform this operation only in a well-ventilated area.

▲WARNING

- **Petrol is extremely flammable and is explosive under certain conditions. Perform this operation in a well-ventilated area with the engine stopped. Do not smoke or allow flames or sparks in the area where petrol is drained or stored and where the fuel tank is refueled.**

1. Stop the engine.
2. Empty the fuel tank using a commercially available hand siphon or other equivalent way.
3. Place the free end of the carburetor draitube in a suitable container.
4. Open the carburetor drain by turning the drain screw (1) counter clockwise.
When all the fuel has drained, turn the screw clockwise until tight.