

Regular service period

(Every 3 months of operation)

- SPARK PLUG – Clean and adjust gap, or if necessary, replace.
- POLYURETHANE FOAM AIR CLEANER ELEMENT – Clean and oil. Service more frequently if operated in dusty areas.
- *CARBURETOR – Check and if necessary, adjust.
- *FUEL FILTER – Replace
- *BELT CONVERTER – Check operation.
- BRAKE CONTROL LINKAGE – Check linkage and if necessary, adjust.
- TIRES – Inspect and check air pressure or circumference.
- ALL NUTS, BOLTS, AND OTHER FASTENERS – Check security and if necessary, tighten.
- REDUCTION GEAR CASE – Check oil level and oil leakage.

(Every year)

- FUEL LINE – Inspect and if necessary, replace.
- STEERING SYSTEM – Check operation and if necessary, adjust.
- *BRAKE SHOES AND PADS – Inspect and if worn, replace.
- SPARK ARRESTER – Check for carbon build-up and if necessary, clean.