


# FEATURES (Not required for operation)


---

## Intercom Mute Knob

The intercom mute system automatically lowers the music/program volume when you speak through the intercom. With the knob turned clockwise, you must speak more loudly to activate the mute circuit. With the knob turned counterclockwise, the mute will activate even at low speaking levels.

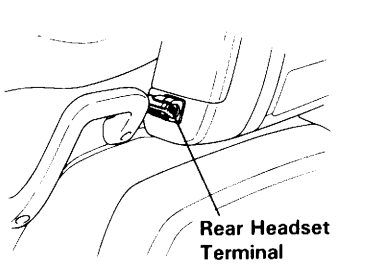

Intercom Mute Knob  
MUTE

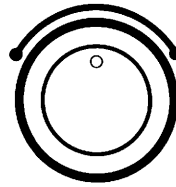

## RADIO ANTENNA

To fold the radio antenna:

Twist and pull upon the knurled coupling and then fold the radio antenna down.

