


# MAINTENANCE

---

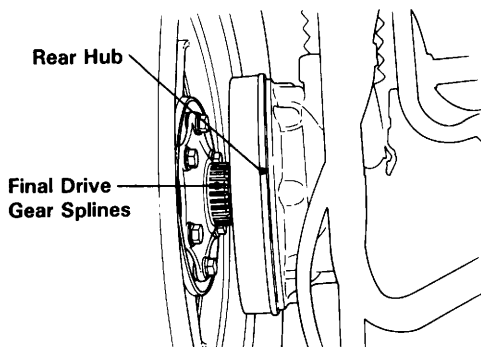

## CAUTION:

- ***When installing the wheel carefully, fit the brake disc between the brake pads to avoid damaging the pads.***
2. After installing the wheel, apply the brake several times and then check that the wheel rotates freely when released. Recheck the wheel if the brake drags or if the wheel does not rotate freely.

## ▲ WARNING

- ***If a torque wrench was not used for installation, see your authorized Honda dealer as soon as possible to verify proper assembly. Improper assembly may lead to loss of braking capability.***

## Specified torque:

Axe nut: 110 N·m (11.0 kg-m, 80 ft-lb)

Axle pinch bolt: 32 N·m (3.2 kg-m, 24 ft-lb)

Shock absorber bolt, upper: 23 N·m (2.3 kg-m, 16 ft-lb)

Shock absorber bolt, lower right: 23 N·m (2.3 kg-m, 16 ft-lb)

lower left: 70 N·m (7.0 kg-m, 51 ft-lb)