

# MAINTENANCE

---

## BATTERY

(Refer to the maintenance precautions on page 61.)

If the motorcycle is operated with insufficient battery electrolyte, sulfation and battery plate damage will occur. If rapid loss of electrolyte is experienced, or if your battery seems to be weak, causing slow starting or other electrical problems, see your authorized Honda dealer.

### Battery Electrolyte:

The battery is under the seat. Remove the rear right side cover to check the battery electrolyte.

The electrolyte level must be maintained between the UPPER and LOWER LEVEL marks on the side of the battery.

If the electrolyte level is low, disconnect the negative (-) terminal lead from the battery first, then disconnect the positive terminal lead. Disconnect the battery breather tube. Remove the bolt and battery holder. Pull out the battery. Remove the battery filler caps. Carefully add distilled water to UPPER LEVEL mark, using a small syringe or plastic funnel.

