

<b>(Ref.No.) Description</b>	<b>Function</b>
(7) Coolant temperature indicator (red)	<p>Lights when the coolant is over the specified temperature.</p> <p>If the indicator goes on while riding, stop the engine and check the reserve tank coolant level. Read pages 21 - 22 and do not ride the motorcycle until the problem has been corrected.</p> <p>Exceeding maximum running temperature can cause serious engine damage.</p>
(8) High beam indicator (blue)	Lights when the headlight is on high beam.
(9) Turn signal indicator (amber)	Flashes when either turn signal is operated.
(10) Neutral indicator (green)	Lights when the transmission is in neutral.
(11) Tripmeter	Shows mileage per trip.
(12) Tripmeter reset knob	Resets tripmeter to zero (0) by turning the knob in direction shown.