
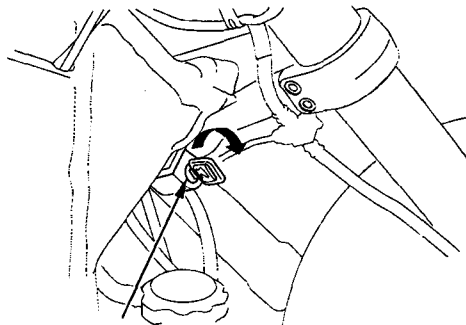


## FEATURES (Not required for operation)

### STEERING LOCK

The steering lock (1) is on the steering stem. Turn the handlebar all the way to the left and insert the key into lock, turn the key 180° clockwise and remove it.

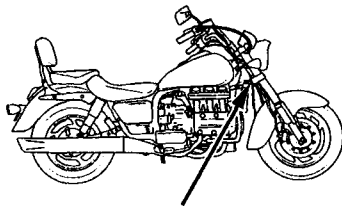

(1)

(1) Steering lock