

SPARK PLUGS

Refer to the Safety Precautions on page 60 .

Recommended plugs:

Standard:

DPR7EA-9 (NGK) or
X22EPR-U9 (NIPPONDENSO)

For cold climate: (Below 5°C, 41°F)
DPR6EA-9 (NGK) or
X20EPR-U9 (NIPPONDENSO)

For extended high speed riding:
DPR8EA-9 (NGK) or
X24EPR-U9 (NIPPONDENSO)


NOTICE

Never use a spark plug with an improper heat range. Severe engine damage could result.

1. Disconnect the spark plug caps from the spark plugs.
2. Clean any dirt from around the spark plug bases.

Remove the spark plugs using the spark plug wrench furnished in the tool kit.

3. Discard the spark plugs.
4. Check the new spark plug gap (1) using a wire-type feeler gauge. If adjustment is necessary, bend the side electrode (2) carefully.
The gap should be:
0.80-0.90 mm (0.031-0.035 in)

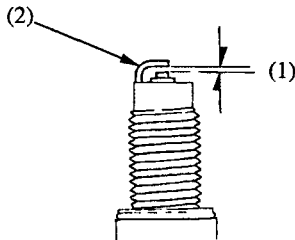

(1) Spark plug gap

(2) Side electrode