
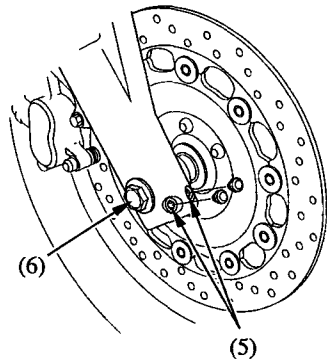


3. Disconnect the speedometer cable (3) from the speedometer gearbox by removing the cable set screw (4).
4. Loosen the right and left axle pinch bolts (5) and remove the axle bolt (6).
5. Remove the front axle (7) and the wheel.

Do not depress the brake lever when the wheel is off the motorcycle. The caliper pistons will be forced out of the cylinders with subsequent loss of brake fluid. If this occurs, servicing of the brake system will be necessary. See your authorized Honda dealer for this service.

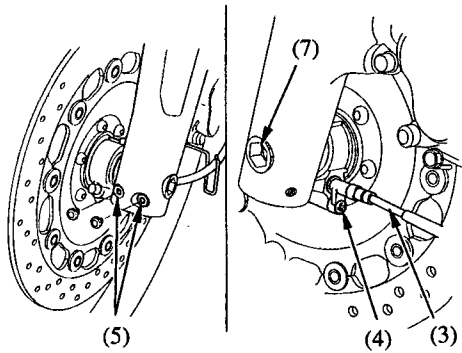

(3) Speedometer cable
(4) Cable set screw

(5) Axle pinch bolts
(7) Axle shaft

(5) Axle pinch bolts
(6) Axle bolt