


- Check the clearance (9) between the brake disc (10) and the caliper bracket (11) on each side with a 0.7 mm feeler gauge (12) after installation. The clearance should be at least 0.7 mm (0.03 in).

If the clearance is not 0.7 mm (0.03 in) or more, loosen the left axle pinch bolt and pull the left fork outward or push inward adjust the clearance. Then tighten the axle pinch bolt to the specified torque.

Axle pinch bolt torque:

22 N·m (2.2 kgf·m , 16 lbf·ft)

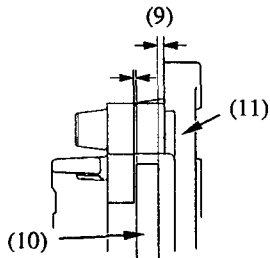


(9) Clearance  
(10) Brake disc

(11) Caliper bracket

Apply the front brake several times, then recheck both discs for caliper bracket-to-disc clearance. Do not operate the motorcycle without adequate clearance.

Failure to provide adequate disc-to-caliper bracket clearance may damage the brake discs and impair braking efficiency.

- Check for free wheel rotation after the brake is released. Recheck the wheel if the brake drags or if the wheel does not rotate freely.

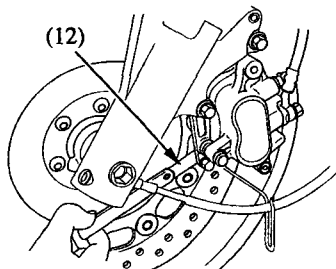

(12) Feeler gauge