


Rear Wheel Removal

1. Raise the rear wheel off the ground by using a chain hoist.
2. **GL1500CT only:**
Remove the saddlebag stay connecting pipe (1) and left saddlebag (2).
 - 1) Remove the connecting pipe joint (3) by removing bolts.
 - 2) Remove the saddlebag mounting bolts (4) and collar (5).

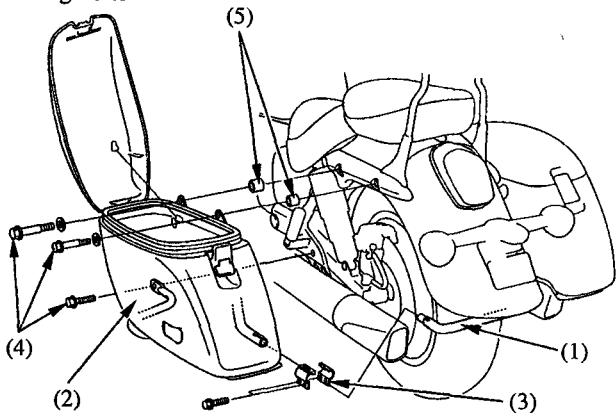

- (1) Saddlebag stay connecting pipe
- (2) Left saddlebag
- (3) Joint
- (4) Bolts
- (5) Collar